




Blackfin Aero Wire: Detachment

Blackfin Aero Special components

- (A) Demo lenses
- (B) Bridge
- (C) Temples
- (D) Nylon wire
- (E) Titanium Wire decoration

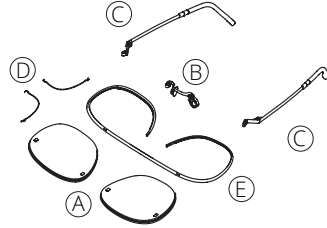

- (F) UV glue remover
- (G) Needles \varnothing 0.40 mm
- (H) Nylon wire kit





Online Tutorial



academy.blackfin.eu/aero-wire-s




Use a needle \varnothing 0.40 mm (G) to place a small amount of UV glue remover (F) in the holes at the back of the lenses. Leave for a few hours then remove the parts and any remaining UV glue. If necessary, add more glue remover.

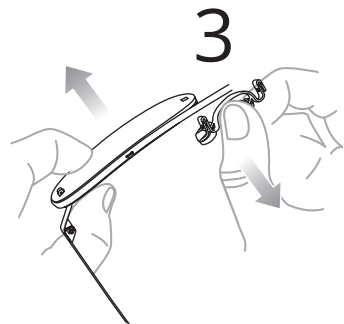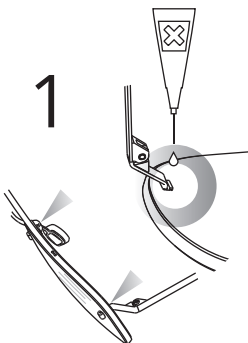



If necessary, add more ungluing substance.

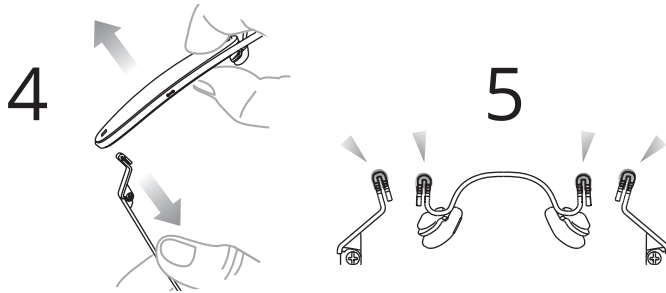

By using the replacement kit supplied (H), start from an easy-to-insert point (*) and slide along the profile, separating the lens from the decoration (E).

6

